 
 
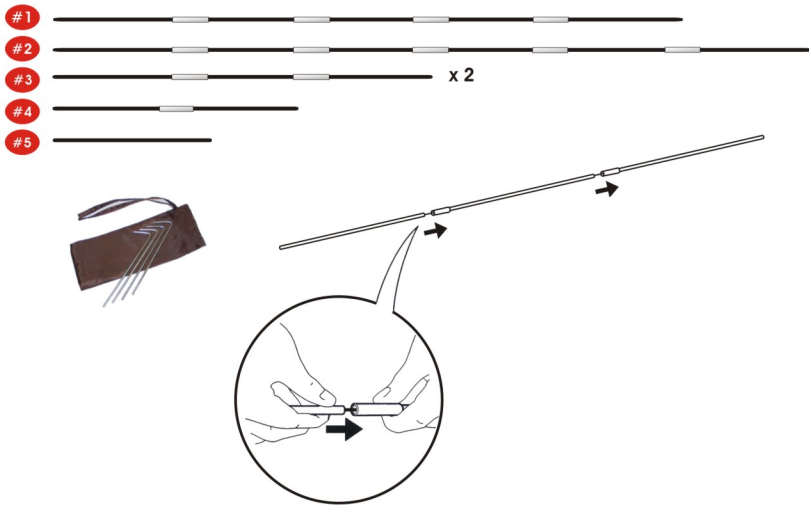 


'Poop Tent' Care & Instruction Sheet

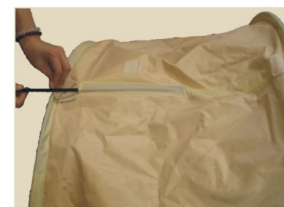

Assembly Instructions:

1. Unpack your Poop Tent with caution. The spring frame of the front panel may spring open suddenly.
2. Remove elastic corded poles from bag and assemble the frame sections by inserting poles all the way into the connectors.
3. Insert one end of the frame sections #1 and #2 into corresponding fabric sleeves, push them all the way into the sleeves and place each end into the "hook & loop" pole pockets.
4. Turnover the tent and slide frame sections #3 through the two fabric sleeves at bottom and place each end into the "hook & loop" closures.
5. Repeat step 3 for frame sections #4 and #5 at front and rear top of the tent.
6. Roll up the front door flap and secure it by attaching the hook tab to the felt fabric nose.
7. Peg down the tent with stakes provided by inserting them through the stake loops.
8. Your Poop Tent is now ready for use.

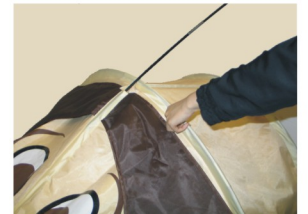


WARNING:

- THIS IS NOT A TOY, KEEP OUT OF REACH OF CHILDREN .
- DO NOT FORCEFULLY BEND OR PUSH FRAME SECTIONS AS POLES MAY BE DAMAGED.
- KEEP AWAY FROM FIRE AND OTHER HEAT SOURCES. THE FABRIC WILL BURN IF LEFT IN CONTACT WITH ANY FLAME SOURCE.
- DO NOT USE UNDER STRONG WIND.
- FRAME SECTIONS ARE FOR USE IN THIS POOP TENT ONLY. NOT INTENDED FOR ANY OTHER USE.



Folding & Storage Instructions:

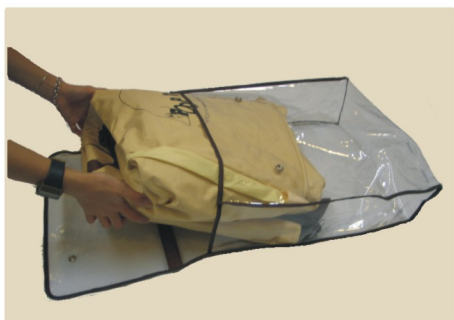

1. Gently remove stakes. **DO NOT PULL** them out by using the stake loop which will damage the tent.
2. Remove dirt and soil either by gentle use of a soft brush or using a soft, dampened cloth.
3. **DO NOT USE** strong detergents, bleach or similar cleaning products, or wash in a washing machine, as this will damage the fabric of the tent.
4. Undo "hook & loop" tabs of pole pockets and slowly push frame sections through sleeves to remove.
5. Gently disconnect poles from connectors and collapse elastic corded poles into original shape.
6. Repeat steps 4-5 for all frame sections.
7. Hold the spring frame of the front panel at each side with the other end pointing towards the ground then fold by raising both hands upwards and towards each other. Bring your hands together closing the frame like a shell. Fold your right hand under your left and this will form three loops. Compact three loops together and the folding of front panel is complete.
8. Fold your tent and repack it with elastic corded poles in carry bag provided.
9. Store in a dry and cool place and keep out of reach of children.

WARNING:

- DO NOT STORE YOUR POOP TENT UNLESS IT IS COMPLETELY DRY AND FULLY DISASSEMBLED.
- DO NOT WASH.
- DO NOT USE SOAP OR DETERGENT.
- SPOT CLEAN ONLY WITH DAMP CLOTH.
- STORE IN DRY AND COOL PLACE.
- KEEP OUT OF REACH OF CHILDREN.

BENJI VENTURES
5906 St. Giles Way
Alexandria, VA 22315-4744
Website: www.benjiventures.com